



Dawar 458 Controller Quick Installation Guide

1. Connect touch screen cable and controller based on the type of tail and touch panel technology supported. Do this as follows:

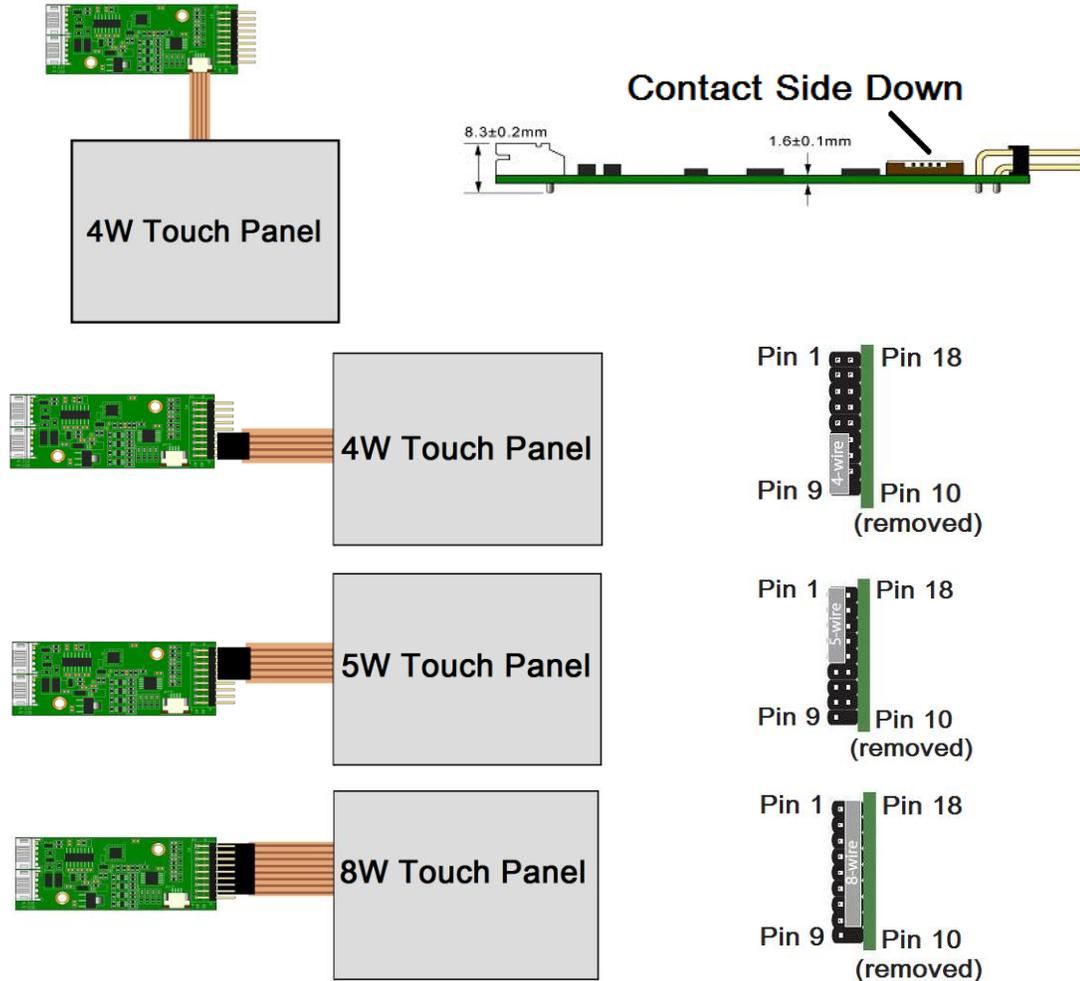

2. Connect the USB or Serial (RS232) Cable to its corresponding connector on the controller. If you are using a USB hub, make sure the hub supplies sufficient power to the controller. If you are using a serial cable, make sure the power is supplied by a PS/2 interface when using the ETP-CB-SXR00 cable, or by the external +5V/GND wire when using the ETP-CB-SXR01 cable.

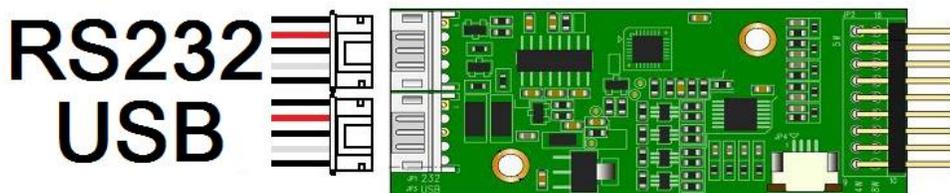

3. Turn on your system.

4. To install drivers, follow this example of the driver installation process for Windows 2000/XP/Vista. For other operating systems, please download your corresponding driver, extract and follow the installation instructions in the folder.
 - Download your corresponding controller driver from Dawar website at www.dawar.com (Products → Controller and Drivers →Dawar Resistive Touch Screen Controller, Drivers) or insert the driver/software disc (if found inside package) into CD/DVD drive
 - Extract files from zip folder to your hard drive (Right click and select 'Extract All')
 - Open the folder and open the setup.exe file
 - If you are asked 'Do you want to run this file?' select 'Run'
 - The installation wizard will open a dialog box asking you if you want to continue the installation, select 'Next'
 - A dialog box will open asking you if you would like to install PS/2 drivers, leave this box unchecked and select 'Next'
 - A dialog box will open asking you if you want to install RS232 drivers (Serial), this box will already be checked (default). Leave this box checked and select 'Next'
 - A dialog box will open asking you if you would like to do a 4-point calibration after system reboot, select 'None', and continue by selecting 'Next'
 - A message box prompt will appear and ask the user to assure that the controller has been connected to the computer when using a USB interface. Select 'OK'
 - A dialog box will open asking you if you would like to use Multi-Monitor. Leave this box checked (default) and select 'Next'
 - Now you will need to select an install location, click 'Next' to install in the default location or click 'Browse' to select another location
 - There will be a "Select Program Folder" dialog box that opens after selecting an install location. You can type in your own folder name, select one from the list, or click 'Next' to utilize the default name
 - If the install RS-232 driver check box was checked, the setup program will scan system COM ports.
 - Click 'Yes' if the setup program finds the controller
 - Your computer will now configure your new software installation
 - Upon completion of the installation, a dialog box will prompt for a 4 point calibration. Click "Yes" to do 4 point calibration now or click "No" to do it later
5. Calibrate your touch panel by following instruction:
 - Go to Start, then find eGalaxTouch, click 'Configure Utility'
 - Click the Tools Tab then click 4 point calibration. Follow the instructions to finish 4 point calibration
 - For 5 wire product, you may do a 9 point or 25 point linearization compensation to achieve better linearization. To switch between 9 point and 25 point calibration please click Setting Tab, select either 9 point or 25 point as linearization style. Then click the Tools Tab and click on the Linearization button.
 - To test the touch panel click Tools Tab, and click Draw Test to start

If you need any technical support, please contact us at
Tel: 412.322.9900 ext. 393 / 1.800.366.1904 or

email: touchscreens@dawar.com